

MAINTENANCE OF HANDMADE ALUMINUM FURNITURE



FEATURES

Our aluminum furniture is meticulously crafted through precise stretching and heat treatments. Electrostatic powder coating is applied to our aluminum furniture

. It is important to take care of your aluminum products from chemicals used in gardens, fertilizers, high pH water for irrigation, and high salt content in coastal areas.

MAINTENANCE AND REPAIR

Furniture should be periodically cleaned thoroughly with a clean, soft cloth and soapy water.

In coastal areas, furniture should be frequently washed and rinsed to remove salt deposits that may damage the finish. We recommend using a mild soap.

When maintaining your aluminum furniture, rinse with water and dry with a soft cloth.

For small surface scratches, we recommend using our touch-up kits.



MAINTENANCE OF HANDMADE ALUMINUM FURNITURE

RECOMMENDATIONS

- To prevent water stains, avoid allowing water to accumulate or stand on the surface of your furniture. Dry it with a dry microfiber cloth.
- When moving your furniture, avoid dragging it along the floor.
- Use felt pads on the bottoms of objects that will remain on the tabletop for an extended period. This is particularly important for natural stone materials or items that retain moisture. Use coasters for beverages.
- We recommend using SNOC protective covers that are tailored to fit your furniture.
- When using protective covers, ensure that your furniture and cushions are clean and dry.
- When covering your furniture with a protective cover (for situations when the product will not be used for an extended period), if possible, remove the cushions.
- If the cushions get wet, ensure that all the water drains out by keeping the zipper facing downward and the zippers open while allowing them to dry.



OUTDOOR FURNITURE COVER GUIDE

MAINTENANCE

Outdoor furniture should be covered when not in use, to protect it from external elements. Before placing the protective cover on the furniture, clean the surface by rinsing it with a hose and drying it with a soft cloth. Ensure that no residue is left on the surface, as it can lead to mold formation over time. During the use of the protective cover, clean any accumulated dirt or residue on the cover's surface once a month. Use a soft-bristle brush, cold or lukewarm water, and a mild, natural soap cleaning solution for your furniture. Avoid using chemical detergents.

Allow the furniture to air dry only.

HOW TO USE?

- Thoroughly clean all furniture and cushions before storage. Allow the furniture to completely dry before storage.
- Cushions should be stored in a dry place when not in use for an extended period or during the off-season. Cushions should be completely clean and dry before storage
- If storing cushions is not possible, lay them flat on the seat before covering. This ensures that the cover fits properly.
- Place the cover over the furniture; the protective covers are specially designed to fit the shape of each furniture piece. Ensure that the cover is fitted according to the shape of the furniture.
- For sections, arrange the furniture as you would normally and place each protective cover over the appropriate piece; secure the cover by pulling the pins located at the bottom to ensure complete coverage.

PROTECTIVE COVER FEATURES

To ensure the long-term health and durability of your outdoor furniture, we strongly recommend covering them with protective covers during the off-season. Prior to covering, it is important to thoroughly clean and fully dry your furniture to prevent mold during storage. Please refer to our care documentation for detailed furniture cleaning instructions for each material type.

Our specially designed covers for outdoor furniture offer superior performance and are made from highly durable, breathable, stain–resistant fabric that is resistant to mold, tearing, and fading. They are the industry's choice for protecting furniture from dust, dirt, harsh UV rays, and challenging weather conditions.


- It is highly compatible with our outdoor furniture collections.
- It is made of durable 100% solution-dved polyester fabric.
- The breathable fabric is resistant to mold and mildew
- It is resistant to shrinkage, fading, UV rays, and harsh weather conditions.
- It maintains its shape without tearing or stretching.
- The fabric is suitable for all weather conditions and is water-resistant.



OUTDOOR FURNITURE COVER GUIDE

TENT ELEVATION

To prevent water from pooling on the product, a tent elevation is created. This allows for proper water drainage and ensures that water flows away from the surface.

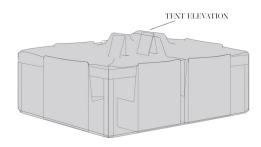

FREQUENTLY ASKED QUESTIONS

WHAT TYPE OF FABRIC IS USED ON SNOC FURNITURE COVERS?

SNOC uses highly durable, breathable, stain–resistant fabric that is resistant to water, mold, tearing, and fading, protecting the furniture from dust and dirt, harsh ultraviolet rays, and challenging weather conditions.

HOW CAN I USE MY SNOC FURNITURE COVER?

Before covering the furniture with the protection cover, make sure to clean and dry the frame and cushions thoroughly.

- Whenever possible, remove the cushions to prevent mold issues in humid environments. However, SNOC protection covers are designed to accommodate cushions within the cover. Place the back cushions flat on the seat cushion(s). If storing the cushions separately, clean and dry them appropriately before covering.
- If your furniture has back cushions, place them flat on top of the seat cushions before fitting the cover. This will ensure a proper fit of the protection cover.
- If your protective cover is for a dining table set, make sure that all the chairs are pushed in as much as possible before putting on the cover.
- For dining tables, coffee tables, and side tables, it is recommended to place a tall accessory such as a vase, which will prevent water from pooling and allow it to flow downward, before fitting the cover.
- Place the covers over the furniture. If your cover has a zipper, open it before placing it over the furniture and then zip it closed securely. Fasten the cords underneath the protection cover by pulling them from both ends.



OUTDOOR FURNITURE COVER GUIDE

WHAT SHOULD I DO IF MY COVER DOES NOT FIT PROPERLY?

- Check the label on the front of the cover to ensure that it is placed correctly on the intended product.
- If your furniture has back cushions, place them flat on top of the seat cushions before fitting the cover. This will help the cover to fit properly.
- If your cover has a zipper, make sure it is open. This will make it easier for the cover to pass over the frame.
- If your cover came with tent supports, ensure that they are upright and placed against the flat surface of the product. If none of the above steps help, contact SNOC Customer Service at 0850 800 6464 for assistance.

WHAT SHOULD I DO IF WATER IS COLLECTING IN MY COVER?

- Ensure that all tent supports provided are in an upright position and placed against the flat surface of the product.
- Make sure that all back cushions are placed flat on top of the seat cushions. The cover is designed to help water flow by placing the cushions flat.
- Ensure that the cover is pulled down as much as possible to prevent any sagging that may cause water pooling. Tighten the cords to keep the cover taut and in place.
- Check the label on the front of the cover to ensure that it is the correct fit for the product's frame. If none of the above steps help, contact SNOC Customer Service at 0850 800 64 64 for assistance.